

#### 1 Insert the batteries into the Remote Control

 
Remove the screw that secure the battery compartment cover on the back side of the remote control first. Insert two size AAA batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type. Place the cover back on. Then screw the cover back on again.

A message will be displayed on the screen when the batteries are low and must be replaced. Note that when the batteries are low, the performance of the remote control may be impaired. Batteries should not be exposed to excessive heat such as sunshine, fire or the like.




#### 2 Connect the antenna to your TV

##### REAR SIDE OF THE TV

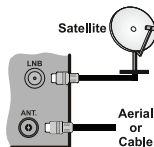

#### 3 Connect the TV to the mains socket

 


#### 4 To switch the TV on

Connect the power cord to the mains socket. Then the standby LED lights up.

To switch on the TV from standby mode either:

 1. Press the button, a numeric button or **Programme +/-** button on the remote control.
2. Press the middle of the side function switch on the TV in.

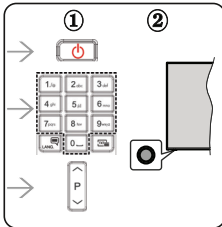

#### 5 HDMI input

PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING. Use a HDMI to HDMI cable to connect the two units together. To select the HDMI input, press the **Source** button on the remote control. Each time it is pressed the on-screen menu confirms your selection.



#### 6 Auto Setup procedure

When the TV is operated for the first time, installation wizard will guide you through the process. First, language selection screen will be displayed. Select the desired language and press **OK**. On the second screen set your country preference. Press **OK** to continue.

You can activate **Store Mode** option in the next step. This option is intended only for store use. It is recommended to select **Home Mode** for home use.

Depending on the model of your TV and the country selection **Privacy Settings** menu may appear at this point. Using this menu you can set your privacy privileges. Highlight a feature and use Left and Right directional buttons to enable or disable. Read the related explanations displayed on the screen for each highlighted feature before making any changes. If the **Internet Connection** option is disabled **Network/Internet Settings** screen will be skipped and not displayed. Highlight **Next** and press **OK** button on the remote control to continue.

The **Network/Internet Settings** menu will be displayed. Please refer to the next section about internet connection on the next page to configure a wired or a wireless connection. After the settings are completed highlight **Next** and press **OK** button to continue.

On the next screen you can set broadcast types to be searched. Additionally you can set a broadcast type as your favourite one. Priority will be given to the selected broadcast type during the search process and the channels of it will be listed on the top of the channel list. When finished, highlight **Next** and press **OK** to continue.

##### About Selecting Broadcast Type

**Digital Aerial:** If this broadcast search option is turned on, the TV will search for digital terrestrial broadcasts after other initial settings are completed.

**Digital Cable:** If this broadcast search option is turned on, the TV will search for digital cable broadcasts after other initial settings are completed. A message will be displayed before starting to search asking if you want to perform cable network search. If you select **Yes** and press **OK** you can select **Network** or set values such as **Frequency**, **Network ID** and **Search Step** on the next screen. If you select **No** and press **OK** you can set **Start Frequency**, **Stop Frequency** and **Search Step** on the next screen. When finished, highlight **Next** and press **OK** button to continue.

*Note: Searching duration will change depending on the selected Search Step.*

**Satellite:** If **Satellite** broadcast search option is turned on, the TV will search for digital satellite broadcasts after other initial settings are completed. Before satellite search is performed some settings should be made. **Antenna Type** menu will be displayed first. You can select **Antenna Type** as **Direct**, **Single Satellite Cable** or **DISEqC switch** by using directional buttons.

**Analogue:** If this broadcast search option is turned on, the TV will search for analogue broadcasts after other initial settings are completed.

After all the available stations are stored, **Channels** menu will be displayed. You can edit the channel list according to your preferences using the **Edit** tab options or press the **Menu** button to quit and watch TV.

*Note: Do not turn off the TV while initializing first time installation.*

## 7 Connect your TV to the Internet

 
Connectivity feature allows you to connect your TV to the home network wired or wirelessly. You can use this networking system to connect to internet or to access photo, video and audio files that are stored on a Media server connected to the network and play/display them on the TV.

However, if your TV does not have Wireless USB dongle or doesn't support internal WLAN feature, you should use wired connection type. Add your TV to your home network by connecting it to the modem/router via an LAN cable (not supplied) as illustrated.


Press the **Home** button to open the main TV menu. Select **Settings** by using the directional buttons, highlight **Network** and press **OK**. While **Network Type** is highlighted, press Left or Right buttons to select connection type. **Wired** connection will be established automatically. If wireless connection is selected, highlight **Scan Wireless Networks** and press **OK**. The TV will search for the available wireless networks and list them when finished. Select one and press the **OK** button to connect. If the wireless network is password-protected you should enter the correct password to access the network.

*Note: Refer to the instruction manual for more details.*

### Wireless Connection

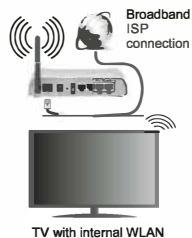

### Wired Connection

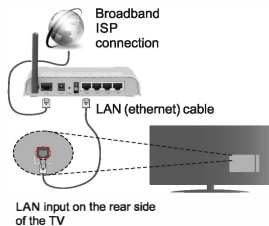 

50492847